


PRODUCT LINE DRAWING

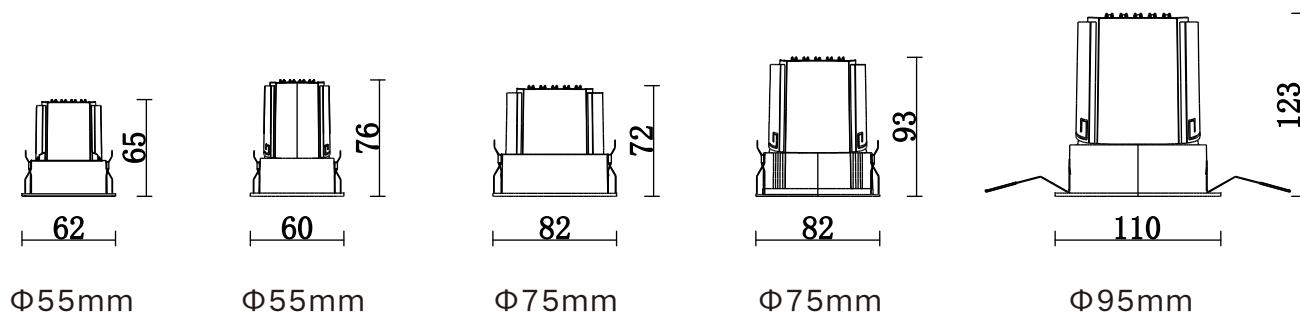

ROUND RECESSED


INSTALLATION STATEMENT




1. Read the manual carefully before installation.
2. Have the installation done by a professional electrician.
3. To avoid electric shock, ensure the power is turned off before installation or maintenance.
4. Under no circumstances should the luminaire be covered by thermal pads or similar materials, and there must be at least 100mm of space around the product.
5. If you notice any abnormalities such as smoke or peculiar smell, please cut off the power immediately and have it inspected, repaired or replaced by a professionally qualified person.
6. Keep the manual for future reference.

ROUND RECESSED INSTALLATION


1. AS SHOWN IN THE FIGURE, OPEN A SUITABLE INSTALLATION HOLE ON THE CEILING (PLEASE REFER TO THE LAMP BODY LABEL FOR SPECIFIC HOLE SIZE).

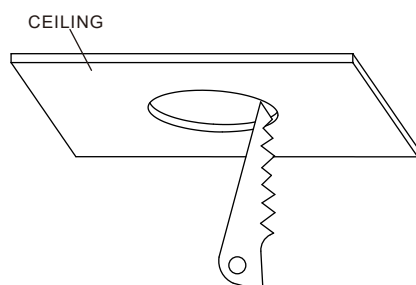


2. CONNECT THE INPUT END OF THE DRIVER TO AC200-240V 50/60Hz.

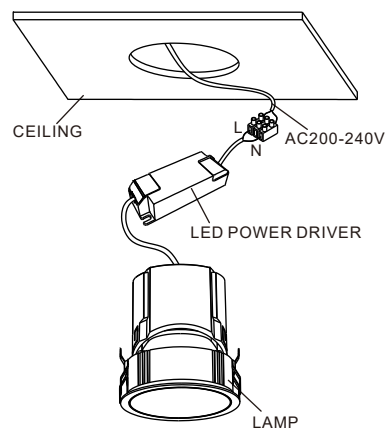


3. PINCH THE SPRINGS ON BOTH SIDES OF THE LED LAMP, PUSH THE LAMP BODY UPWARDS INTO THE OPENING IN THE CEILING, AND ENSURE THAT THE LAMP IS SECURELY INSTALLED.

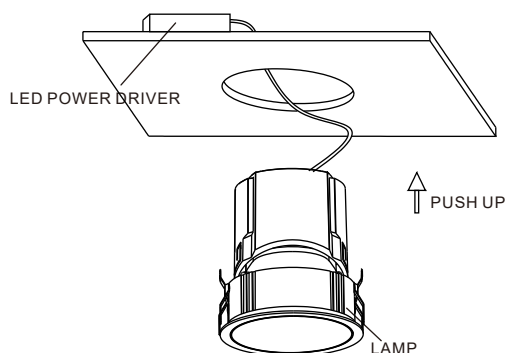


4. ENSURE THAT THE WIRING IS CORRECT AND CAN BE USED WHEN POWERED ON.

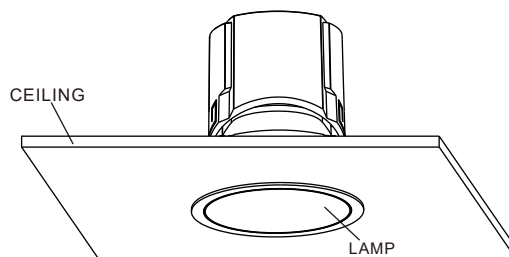

PRODUCT LINE DRAWING

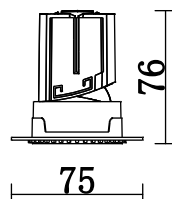

Φ55mm

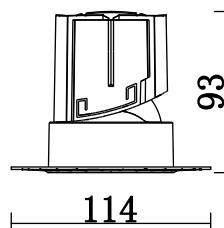


Φ75mm


ROUND TRIMLESS

ROUND TRIMLESS INSTALLATION


1. AS SHOWN IN THE FIGURE, OPEN A SUITABLE INSTALLATION HOLE ON THE CEILING (PLEASE REFER TO THE LAMP BODY LABEL FOR SPECIFIC HOLE SIZE).

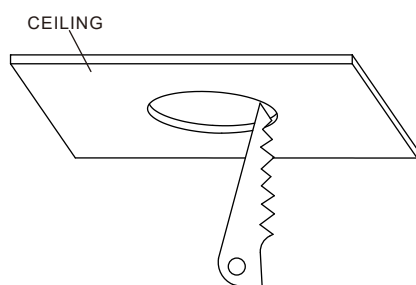


2. FIX THE PRE-EMBEDDED FRAME IN THE PREPARED INSTALLATION HOLE ON THE CEILING WITH SCREWS.

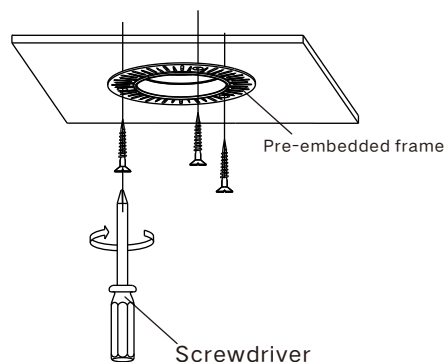


3. STICK THE FIBERGLASS CRACK-RESISTANT MESH ONTO THE PRE-EMBEDDED FRAME WITH PUTTY, THEN APPLY PLASTER TO ENSURE THE PRE-EMBEDDED FRAME IS FLUSH WITH THE CEILING AFTER PLASTERING. ONCE THE PLASTER IS COMPLETELY DRY, SAND THE SURFACE AND THEN APPLY LATEX PAINT OR ART PAINT.

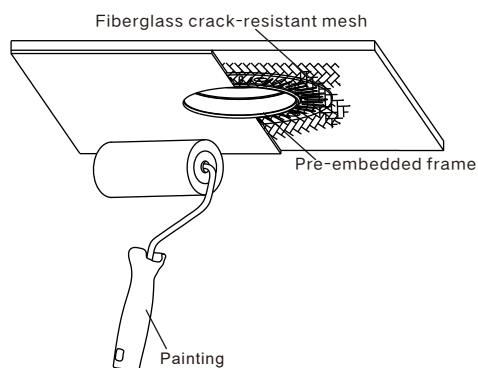


4. AFTER THE PAINT IS COMPLETELY DRY, CONNECT THE INPUT END OF THE DRIVER TO THE AC200-240V 50/60HZ POWER SUPPLY.

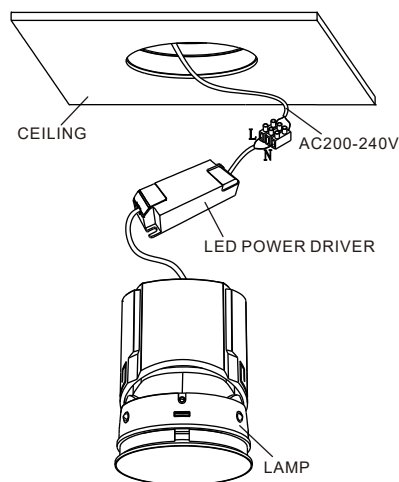


5. PUSH THE LUMINAIRE UPWARD INTO THE PRE-EMBEDDED FRAME. ENSURE THE LUMINAIRE IS NOT COVERED BY THERMAL INSULATION MATERIALS.

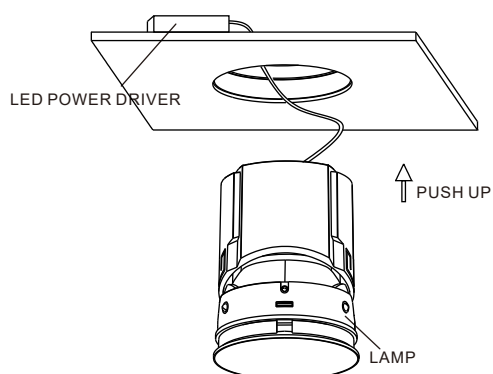

6. POWER ON THE LUMINAIRE TO USE IT.

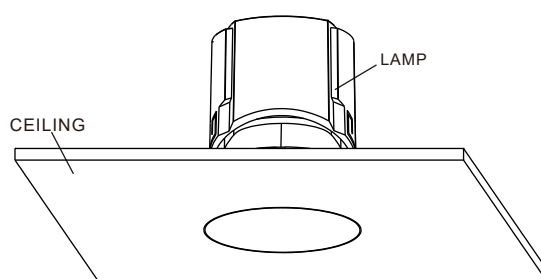

PRODUCT LINE DRAWING

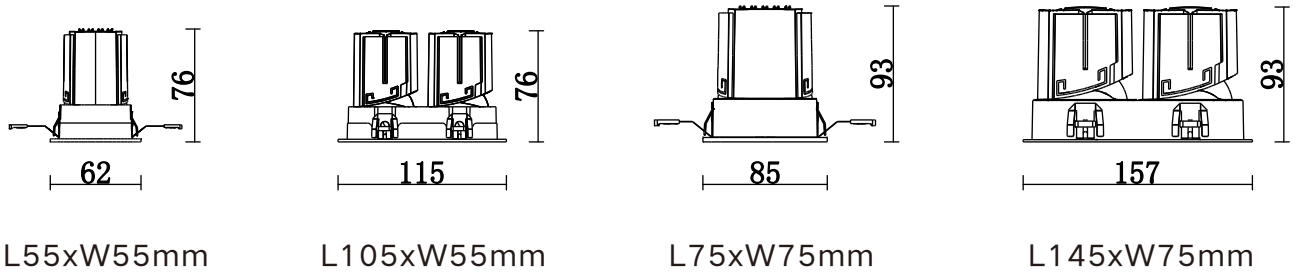

SQUARE RECESSED


INSTALLATION STATEMENT

1. Read the manual carefully before installation.
2. Have the installation done by a professional electrician.
3. To avoid electric shock, ensure the power is turned off before installation or maintenance.
4. Under no circumstances should the luminaire be covered by thermal pads or similar materials, and there must be at least 100mm of space around the product.
5. If you notice any abnormalities such as smoke or peculiar smell, please cut off the power immediately and have it inspected, repaired or replaced by a professionally qualified person.
6. Keep the manual for future reference.




SQUARE RECESSED INSTALLATION


1. AS SHOWN IN THE FIGURE, OPEN A SUITABLE INSTALLATION HOLE ON THE CEILING (PLEASE REFER TO THE LAMP BODY LABEL FOR SPECIFIC HOLE SIZE).

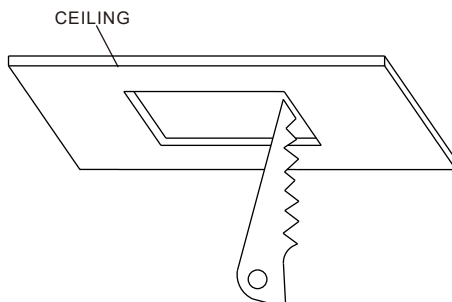


2. CONNECT THE INPUT END OF THE DRIVER TO AC200-240V 50/60Hz.

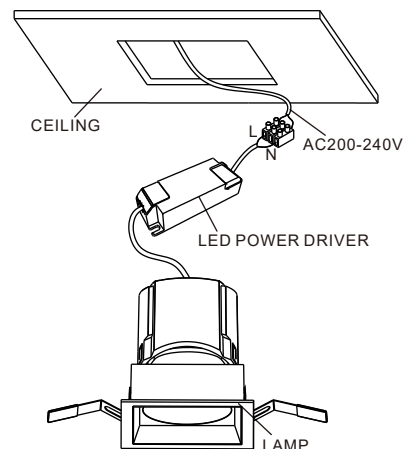


3. PINCH THE SPRINGS ON BOTH SIDES OF THE LED LAMP, PUSH THE LAMP BODY UPWARDS INTO THE OPENING IN THE CEILING, AND ENSURE THAT THE LAMP IS SECURELY INSTALLED.

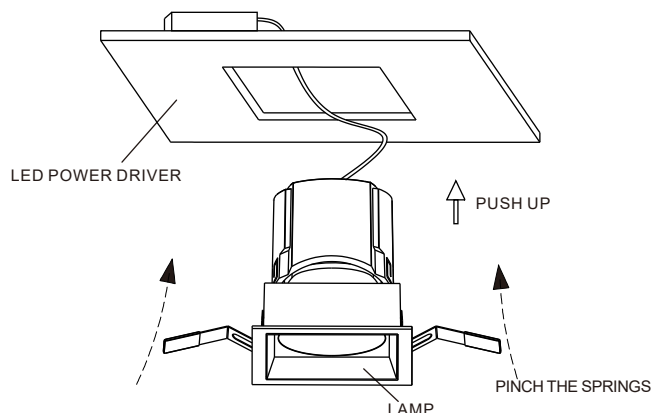


4. ENSURE THAT THE WIRING IS CORRECT AND CAN BE USED WHEN POWERED ON.

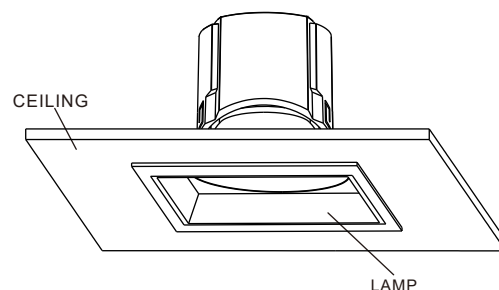


PRODUCT LINE DRAWING

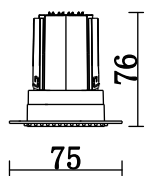


L55xW55mm

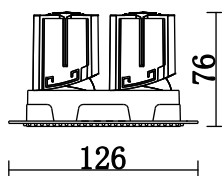

L105xW55mm

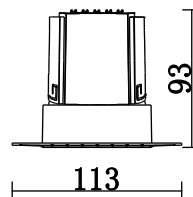

L75xW75mm

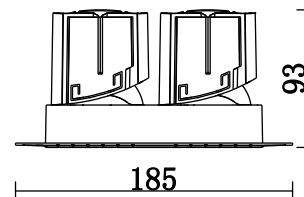


L145xW75mm


SQUARE TRIMLESS

SQUARE TRIMLESS INSTALLATION


1. AS SHOWN IN THE FIGURE, OPEN A SUITABLE INSTALLATION HOLE ON THE CEILING (PLEASE REFER TO THE LAMP BODY LABEL FOR SPECIFIC HOLE SIZE).

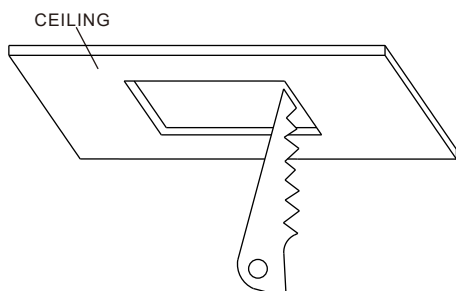


2. FIX THE PRE-EMBEDDED FRAME IN THE PREPARED INSTALLATION HOLE ON THE CEILING WITH SCREWS.

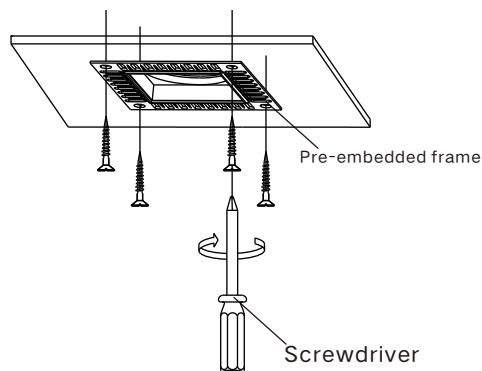


3. STICK THE FIBERGLASS CRACK-RESISTANT MESH ONTO THE PRE-EMBEDDED FRAME WITH PUTTY, THEN APPLY PLASTER TO ENSURE THE PRE-EMBEDDED FRAME IS FLUSH WITH THE CEILING AFTER PLASTERING. ONCE THE PLASTER IS COMPLETELY DRY, SAND THE SURFACE AND THEN APPLY LATEX PAINT OR ART PAINT.

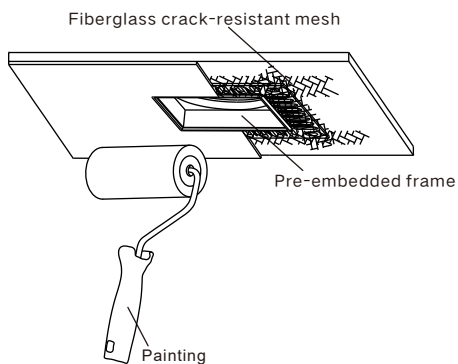

4. AFTER THE PAINT IS COMPLETELY DRY, CONNECT THE INPUT END OF THE DRIVER TO THE AC200-240V 50/60HZ POWER SUPPLY.

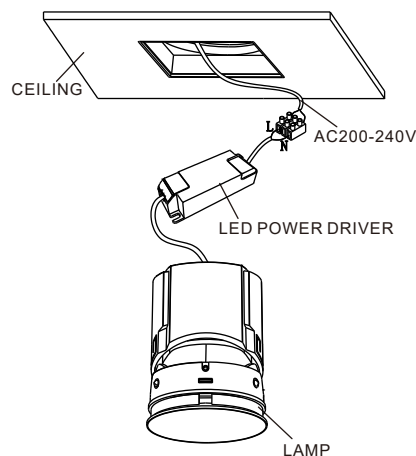

5. PUSH THE LUMINAIRE UPWARD INTO THE PRE-EMBEDDED FRAME. ENSURE THE LUMINAIRE IS NOT COVERED BY THERMAL INSULATION MATERIALS.

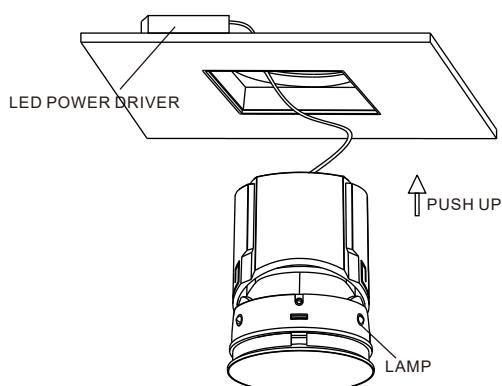

6. POWER ON THE LUMINAIRE TO USE IT.

